

# FYNCE



# FYNCE

**FYNCE blender / Smoothie maker /  
TO GO cup / 400 watts**

F04-004/A&B  
FYNCE

**FYNCE** would first like to thank you very much for your purchase.  
To reward you for your purchase you get free access to 2 of our FYNCE ebooks:

- *'(H)eerlijk eten - de waarheid over voedingsstoffen'*
- *'(H)eerlijke cheat meals - Het FYNCE kookboek'*

Get your free ebooks via the link below!

<https://www.fynce.nl/handleidingen>

**FYNCE** recommends that you always read the manual carefully before use and that you also perform the actions according to the manual.

**FYNCE** is available for questions, complaints or other comments. Reach our customer service:

- *Mail: [contact@fynce.nl](mailto:contact@fynce.nl)*

## ENGLISH USER MANUAL

### - The drinking bottle explained

#### Components

1. blender
2. To-go shaker cup
3. Drink cap
4. Knife cap

The blender (1) is an attachment for the to-go shaker (2).

The blender is 400 watts, which is powerful enough to make your healthy smoothies!



Use the blade cap (4) for blending, screw it well on the bottle when all the necessary ingredients are in it. Then place the cup upside down on the blender and when everything is in place you can start blending (if the blender is plugged into the socket).

Sometimes the cup is too full and the blender can't reach everything, stop blending for a while, remove the cup from the blender and shake it back and forth, so that the ingredients that still need to be blended can also be blended!

After everything has been blended, you can unscrew the bottle from the blender, put it back down properly (with the top up) and you can exchange the blade cap for the drinking cap (3).

Cleaning is also relatively easy, parts 2, 3, 4 can be washed in warm water or in the dishwasher. Please note, part 1, the blender is not water resistant! So avoid water or any other liquid with this.

## ENGLISH MANUAL

### IMPORTANT PRECAUTIONS

Basic safety precautions should be followed when using this product, including:

#### > READ ALL INSTRUCTIONS BEFORE USE

- Before use, inspect all parts for scratches, holes, tears, worn areas, discoloration or loose stitching, and other unusual issues. If something is wrong with a part, do not use the product and contact our customer service as soon as possible.
- Do not use the parts on, for example, concrete or other rough surfaces. When used on rough surfaces, the elements can be damaged. So make sure that the surface is flat during use and that all sharp parts are away. So also be careful with rings and long nails.
- This product is not a toy, so it is not intended to be played with. So also keep the elements away from children, pets or any other individuals who need supervision.
- Close supervision is necessary when used by or near children.
- Before use, check that all parts are correctly positioned and attached.
- Use all parts responsibly.
- Use all parts only and always responsibly.  
lubiX/ FYNCE cannot be held accountable and/or responsible for the possible consequences of using this product.
- Keeps the parts from being too hot (> 35 degrees Celsius) or too cold (< -15 degrees Celsius) for a long time.
- Use the parts only in the way for which they are intended.
- Clean all elements regularly.
- Do not disassemble and/or attempt to modify this product.
- Avoid strong shocks or impacts.
- If the blender smokes, gives off a burning or unexpected smell, heats or exhibits abnormal symptoms, there may be a risk of fire or electric shock, unplug the blender from the electrical outlet as soon as possible.
- This product is not a medical device.
- Rinse the elements To-go shaker cup, Drink cap, Knife cap with water before first use.
- Avoid temperatures of the liquid in and therefore outside the bottle of about -10 and above 65 degrees.
- This product is not intended for use in the freezer or microwave.

- If you are not using it for a period of time, store your drinking bottle without the cap screwed on. Make sure it does not become an enclosed space, which can lead to the development of bacteria.
- Fill your drinking bottle by unscrewing the cap.
- After filling, screw the cap back on tightly so that it will not leak.
- Certain drinks can leave traces in the drinking bottle, that is at your own risk. These traces can then still be tasted, even with a refill of a different liquid. These traces can also be permanent.
- Not all elements are waterproof, so keep them out of humid areas.
- Avoid cleaning with chemical tools. Regular cleaning with just a damp cloth is sufficient.
- To avoid the risk of electric shock, do not immerse the cord, plug or motor unit in water or other liquids.
- Do not let the cord hang over the edge of the table or touch it or touch hot surfaces.
- Never leave the device unattended when it is in use.
- Avoid contact with moving parts. Keep hands and utensils out of the sports bottle while blending to avoid personal injury or damage to the blender.
- The knife is sharp. Be careful when handling.
- To reduce the risk of injury, never place cutting-mount blades on the base without a sports bottle properly attached.
- Do not try to bypass the locking system that turns on the device.
- Do not mix hot liquids in the blender.
- Do not use any appliance with a damaged cord or plug. And do not use the defective device that is damaged by dropping or otherwise. Return the unit to the nearest authorized service center for examination, repair or electrical mechanical adjustment.
- Unplug the blender when not in use.

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY**



## > PACKING CONTENTS

### **1x Blender**

> Supplied in black/silver



### **1x Cap attachment with lockable drinking spout**

> Supplied in black



### **1x Cap with metal blades**

> Supplied in black



### **600 ml shake cup**

> Supplied in transparent



## > OPERATING YOUR BLENDER

1.

Place the sports bottle on a flat surface with the open end facing up.

**Fill the sports bottle with your favorite ingredients with liquids.**

Make sure you don't fill ingredients that exceed the MAX mark.



2.

**Attach the blade assembly to the open end of the sports bottle.**

Turn the sports bottle upside down, align the arrows on the blade assembly with the arrows on the base and **place the sports bottle on the base.**

To lock the sports bottle into the base for hands-free use, **align the safety switch on the blade holder with the safety opening on the motor base** and twist the sports bottle clockwise into the base. **If you do not lock the bottle in the correct position, the button will not operate.** With one simple touch, the blender works by pressing the button on the housing. **Blending stops as soon as you lose the knob lock.**



3.

**Turn the sports bottle over** and place it on a flat surface. Replace the blade assembly with the drinking lid. **Take the sports bottle with you throughout the day to stay hydrated.**



## > TIPS FOR MIXING

- Add liquids to the bottle first, unless a prescription says otherwise. For optimal performance, place the desired ingredients in the sports bottle in the following order: liquids, fresh ingredients, yoghurt and ice cream.
- Cut all firm fruits and vegetables into pieces no larger than 1.5 to 2.5 cm.
- Do not overload the sports bottle. If the motor is overloaded, immediately turn off the blender, unplug it and let it cool for at least 15 minutes. Then remove some of the food and continue.
- The continuous pressing time of the button should not exceed 1 minute. If the blender is overheating, a little smell is normal, unplug it and let it cool for at least 15 minutes before continuing.
- It is not recommended to make mashed potatoes, beat egg whites, use dairy, mix chewy things like frozen fruit, or grind raw meat.

This device is supplied with a thermally resettable fuse.

Prevent damage to the motor in case of extreme overload.

If the device turns off unexpectedly, unplug it and let it cool down for at least 15 minutes before continuing.

## > CLEAN AND STORE YOUR BLENDER

**IMPORTANT: UNPLUG BEFORE CLEANING. DO NOT IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUID.**

Use a damp, soft sponge with a mild detergent to clean the outside of the blender base. All parts except the blender base are dishwasher safe. You can also wash the parts in warm water, except the blender base... Rinse well and dry.

## > CLEANING UP YOUR BLENDER

After cleaning, reassemble the blade assembly to the open end of the empty sports bottle and then place it on the blender base. Click on the full bottle and the drinking lid on the end of the sports bottle.

Before the next use, check that the rubber ring is correctly placed in the blade assembly. If the rubber ring is not installed correctly, the rubber ring will be damaged during blending, causing the blender base to leak.



SAVE THESE INSTRUCTIONS

[WWW.FYNCE.NL](http://WWW.FYNCE.NL)

[CONTACT@FYNCE.NL](mailto:CONTACT@FYNCE.NL)