

# FYNCE



## FYNCE

**FYNCE Shake cup white / 600 ml / Blender bottle / portable sports bottle**

03-003A  
FYNCE

**FYNCE** would first like to thank you very much for your purchase.  
To reward you for your purchase you get free access to 2 of our FYNCE ebooks:

- *'(H)eerlijk eten - de waarheid over voedingsstoffen'*
- *'Thuis sporten - meer dan 50 oefeningen'*

Get your free ebooks via the link below!

<https://www.fynce.nl/handleidingen>

**FYNCE** recommends that you always read the manual carefully before use and that you also perform the actions according to the manual.

**FYNCE** is available for questions, complaints or other comments. Reach our customer service:

- Mail: [contact@fynce.nl](mailto:contact@fynce.nl)

## ENGLISH USER MANUAL

### - The drinking bottle explained Components

1. Cup
2. Cap

By unscrewing the cap you can refill the bottle with a liquid.

Make sure the cap is tightly screwed on if there is any liquid in the bottle.

Make sure the cap is closed if the bottle is not being drunk but contains a liquid.



## ENGLISH MANUAL

### IMPORTANT PRECAUTIONS

Basic safety precautions should be followed when using this product, including:

#### > READ ALL INSTRUCTIONS BEFORE USE

- Before use, inspect all parts for scratches, holes, tears, worn areas, discoloration or loose stitching, and other unusual issues. If something is wrong with a part, do not use the product and contact our customer service as soon as possible.
- Do not use the parts on, for example, concrete or other rough surfaces. When used on rough surfaces, the elements can be damaged. So make sure that the surface is flat during use and that all sharp parts are away. So also be careful with rings and long nails.
- This product is not a toy, so it is not intended to be played with. So also keep the elements away from children, pets or any other individuals who need supervision.
- Close supervision is necessary when used by or near children.
- Before use, check that all parts are correctly positioned and attached.
- Use all parts responsibly.
- Use all parts only and always responsibly.  
lubiX/ FYNCE cannot be held accountable and/or responsible for the possible consequences of using this product.
- Keeps the parts from being too hot (> 35 degrees Celsius) or too cold (< -15 degrees Celsius) for a long time.
- Use the parts only in the way for which they are intended.
- Clean all elements regularly.
- Avoid strong shocks or impacts.
- This product is not a medical device.
- Rinse this product with water before first use.
- Avoid temperatures of the liquid in and therefore outside the bottle of about -10 and above 65 degrees.
- This product is not intended for use in the freezer or microwave.
- If you are not using it for a period of time, store your drinking bottle without the cap screwed on. Make sure it does not become an enclosed space, which can lead to the development of bacteria.
- Fill your drinking bottle by unscrewing the cap.
- After filling, screw the cap back on tightly so that it will not leak.

- Also, if your bottle is filled, but you are not drinking, make sure to flip the cap in so your bottle won't leak. Do this especially when you are on the go so that the bottle does not accidentally leak or spill contents.
- Certain drinks can leave traces in the drinking bottle, that is at your own risk. These traces can then still be tasted, even with a refill of a different liquid. These traces can also be permanent.
- Avoid cleaning with chemical tools. Regular cleaning with just a damp cloth is sufficient.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

**> PACKING CONTENTS**

**1x Shaker cup 600 ml**

> Supplied in white



**1x Rotatable cap with large drinking spout**

> Supplied in white



## **> CLEANING (AFTER USE)**

- This water bottle is - at your own risk - dishwasher safe (up to 65 degrees). Then place all parts separately in the dishwasher. Please note that other parts can discolour the bottle. We recommend putting the cap loose in the cutlery drawer, so that the cap stays in place.
- Do not use abrasives, solvents, bleaches and/or other chemical cleaning agents to clean your drinking bottle.
- Avoid that the bottle does not come into contact with temperatures above 65 degrees. Then the bottle can deform due to the heat and possibly even leak.
- To remove bad tastes from the bottle, you can fill your bottle with hot water (<65 degrees) and leave the bottle for at least 30 minutes.

## **> GENERAL USE**

- This drinking bottle is not designed for hot liquids. So only fill the bottle with non-hot drinks.
- Not for use with carbonated or pulpy drinks.
- Before drinking, make sure the cap is tightly screwed onto the bottle.
- Do not overfill the bottle.
- Do not place the drinking bottle in the microwave or freezer.
- Do not use cleaning agents containing bleach, chlorine, abrasives and/or other harsh chemicals.
- Do not use the drinking bottle if it is damaged.

SAVE THESE INSTRUCTIONS

[WWW.FYNCE.NL](http://WWW.FYNCE.NL)

[CONTACT@FYNCE.NL](mailto:CONTACT@FYNCE.NL)